



Perfect 10 Hybrid Displays

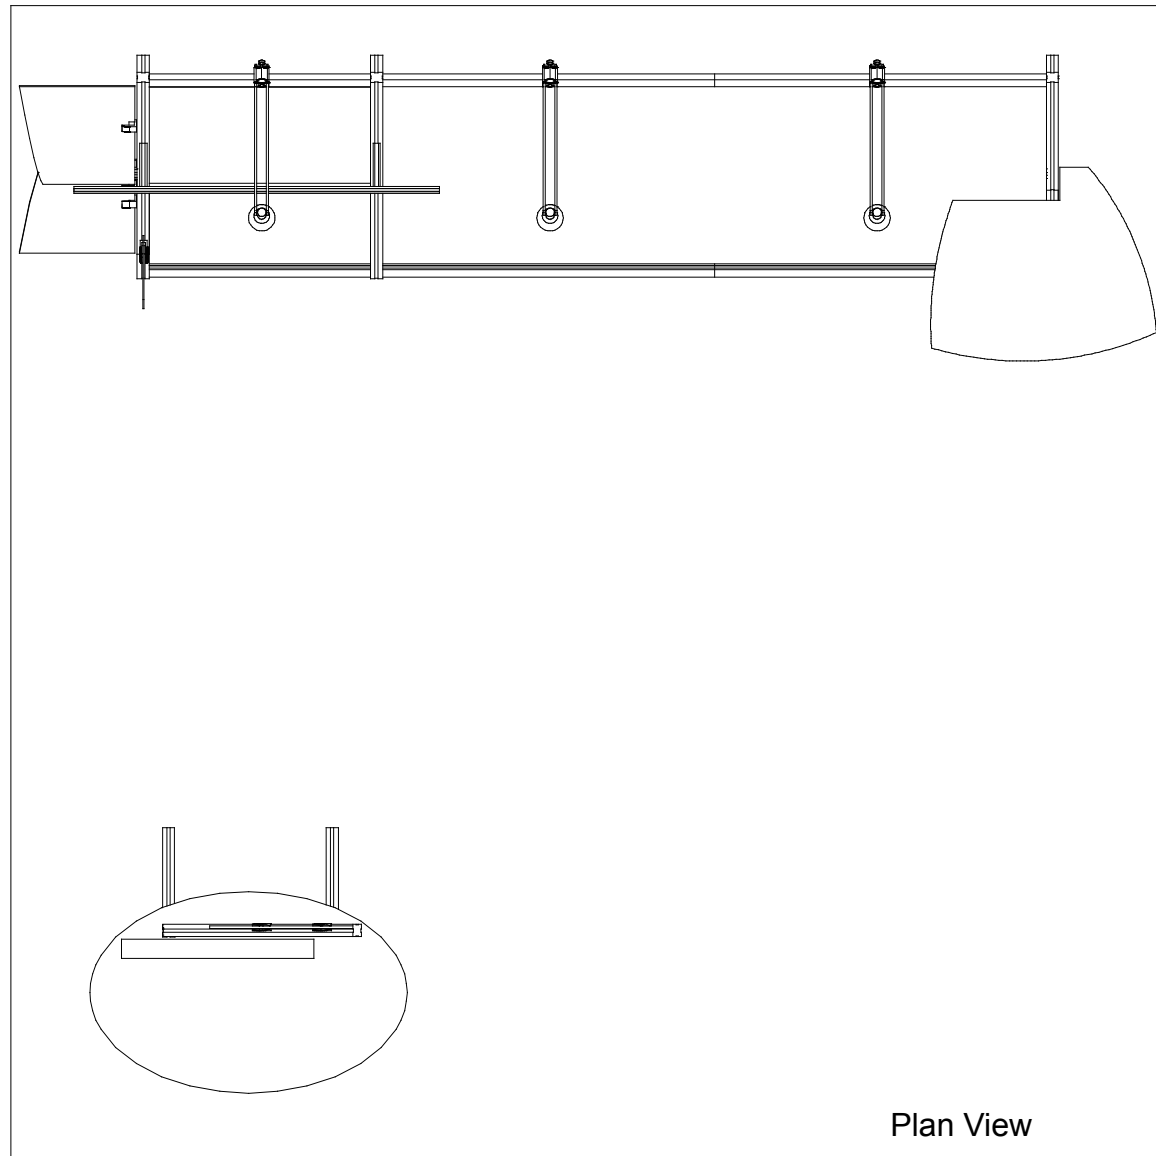

10'

Plan View

10'

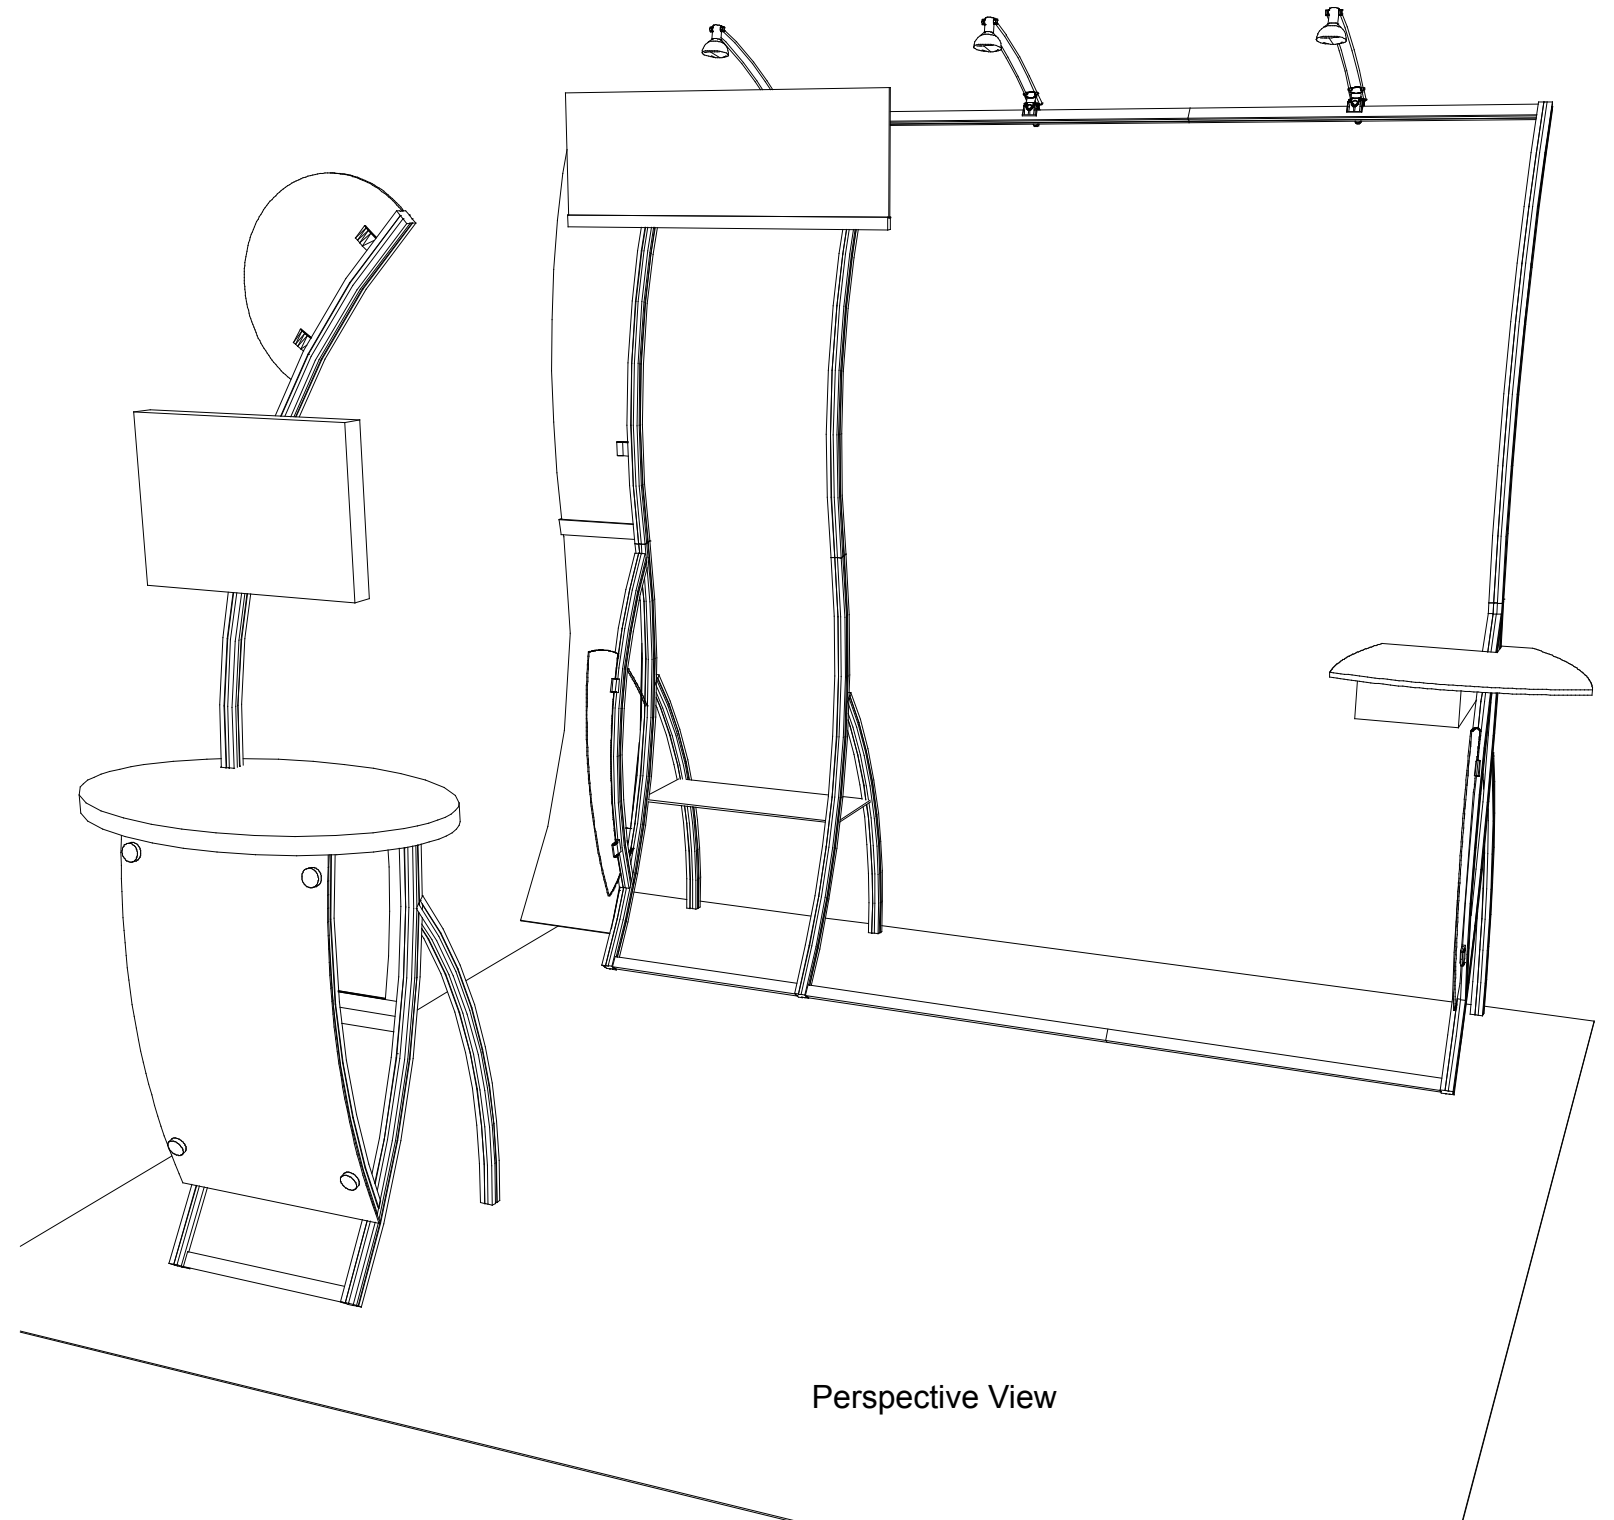

Perspective View

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item	Qty.	Description
1	1	Left Leg Assembly
2	1	Middle Leg Assembly
3	1	Upper Curved Vertical
3a	1	Upper Curved Vertical
4	2	23" w Horizontal
5	1	Right Leg Assembly
6	1	Upper Curved Vertical
7	1	69" w Horizontal
8	1	69" w Horizontal

Steps:




NOTE: Assembly may be easiest if assembled face down on floor then lifted upright.

- 1) Connect upper curved vertical extrusions [3a,3,6] to leg assemblies [1,2,5].
- 2) Connect lower and upper horizontal extrusions between vertical assemblies by slightly tightening BLACK knobs on backside of extrusion as shown.

NOTE: Make sure velcro faces toward back and knobs face horizontally as shown in detail.

**** Various Accessories Available ****


NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.

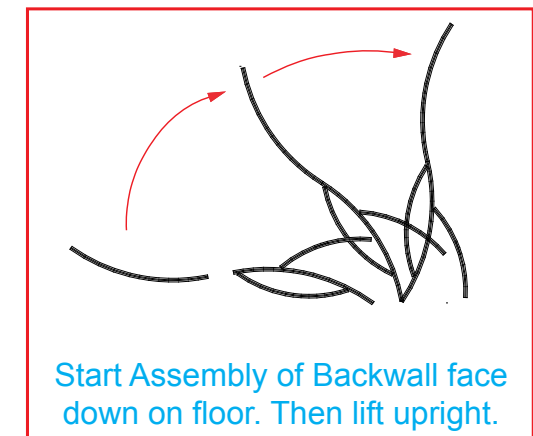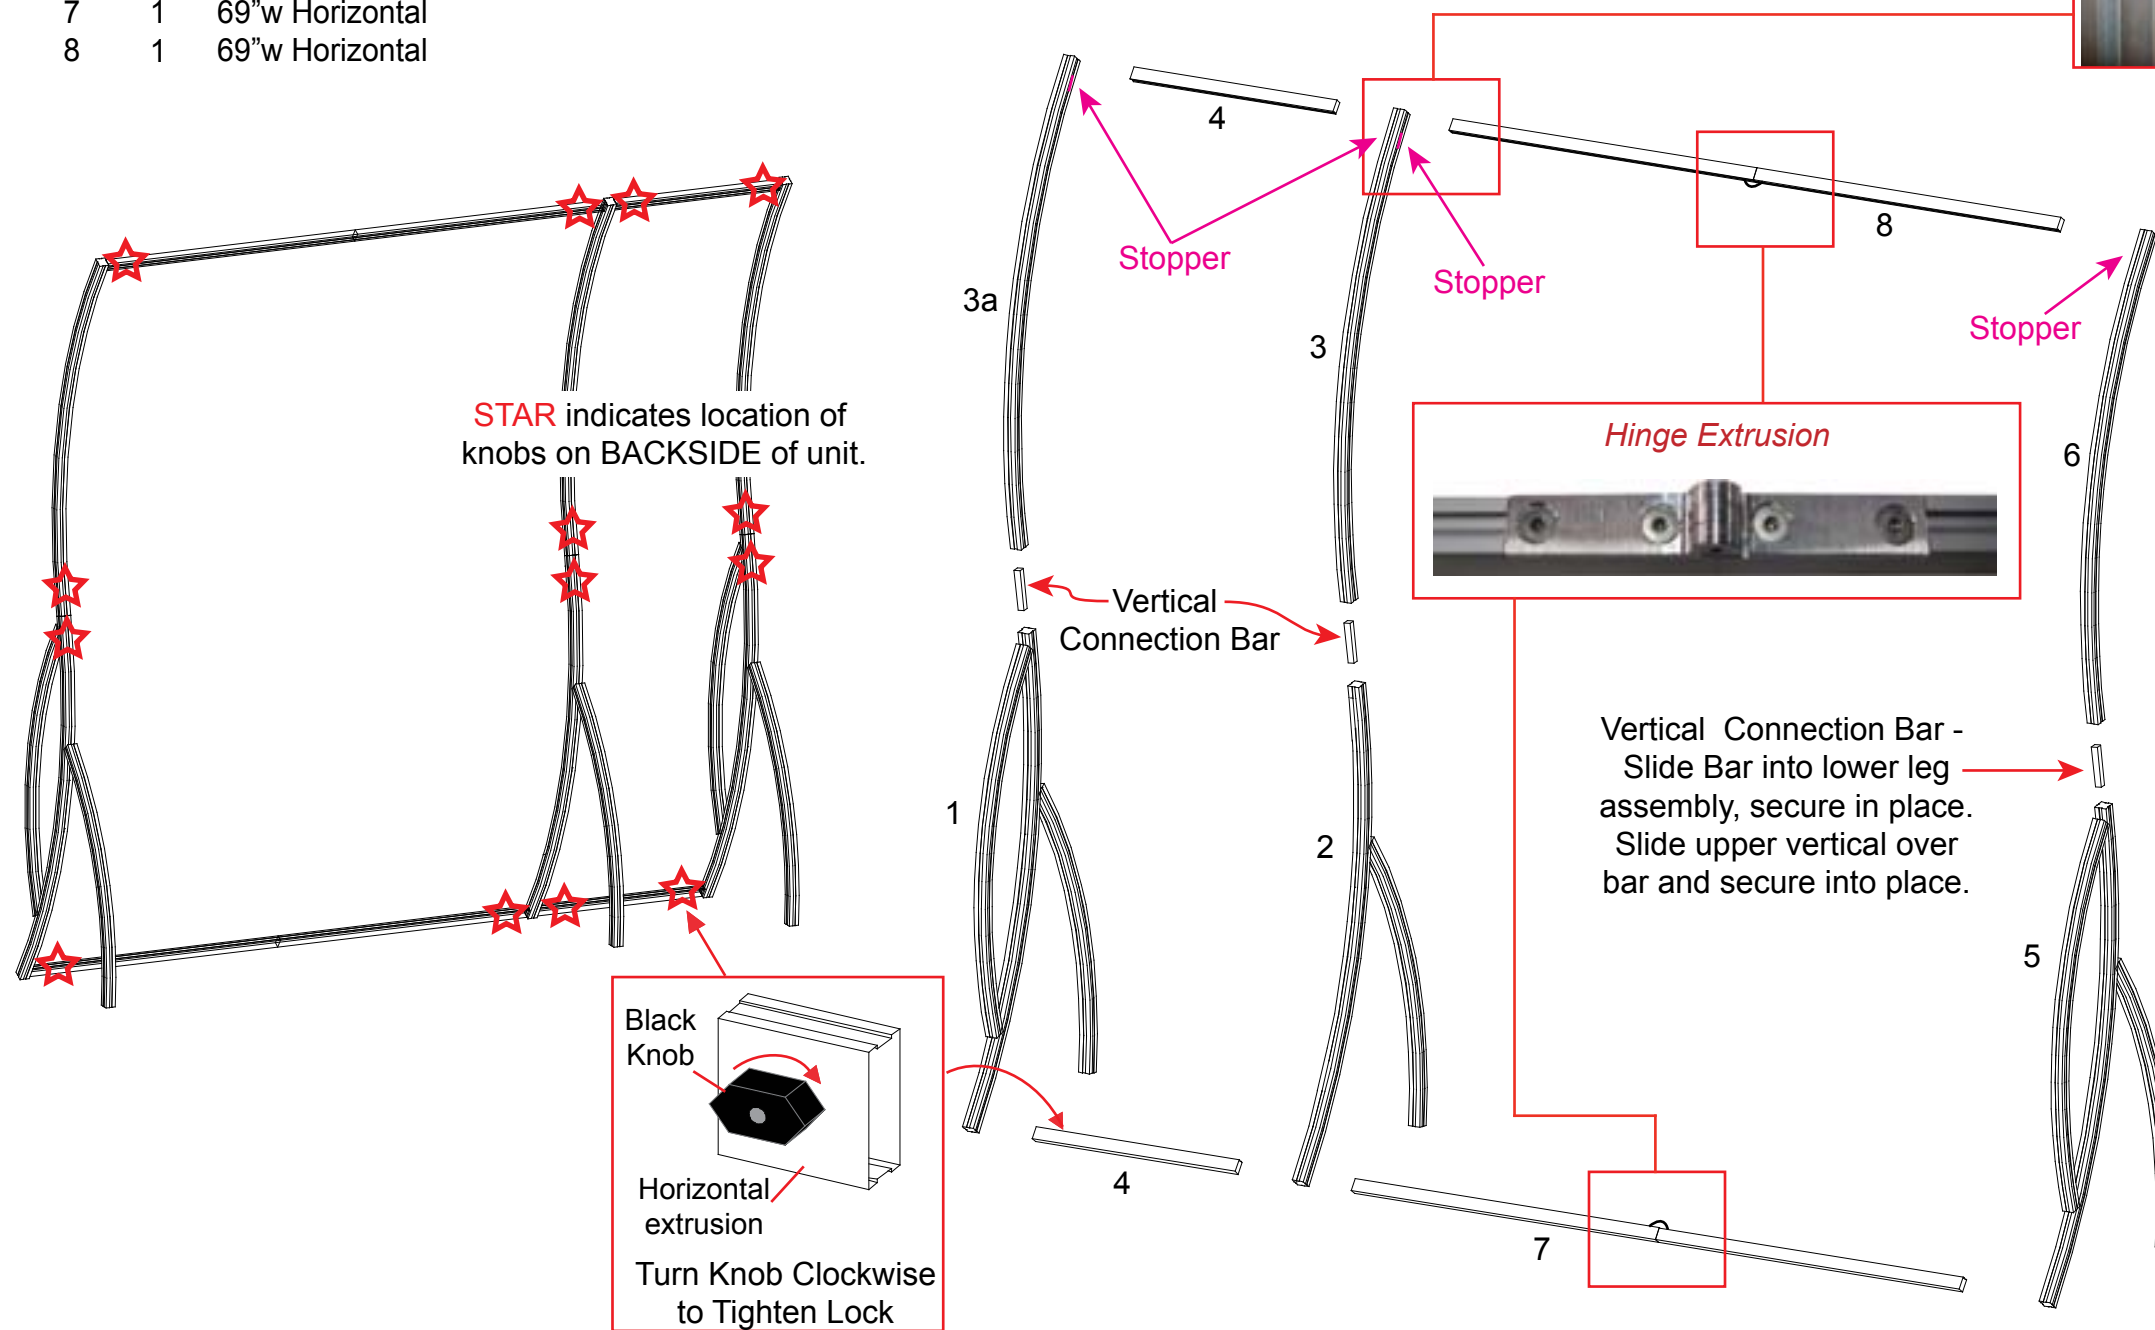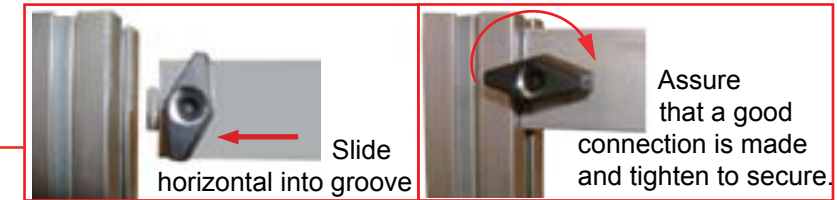


Step stool may be required for assembly.




WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING




Attach decorative wing and blades to A10's attached to Backwall as shown.




Decorative Blade Attachment (if accidentally removed)
Slide A10 Clamp into groove of square extrusion.

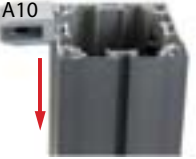



When desired location is found, tighten set screw to secure.




Tighten plastic knob to secure Wing in place.



Hex Key Tool

(if necessary)

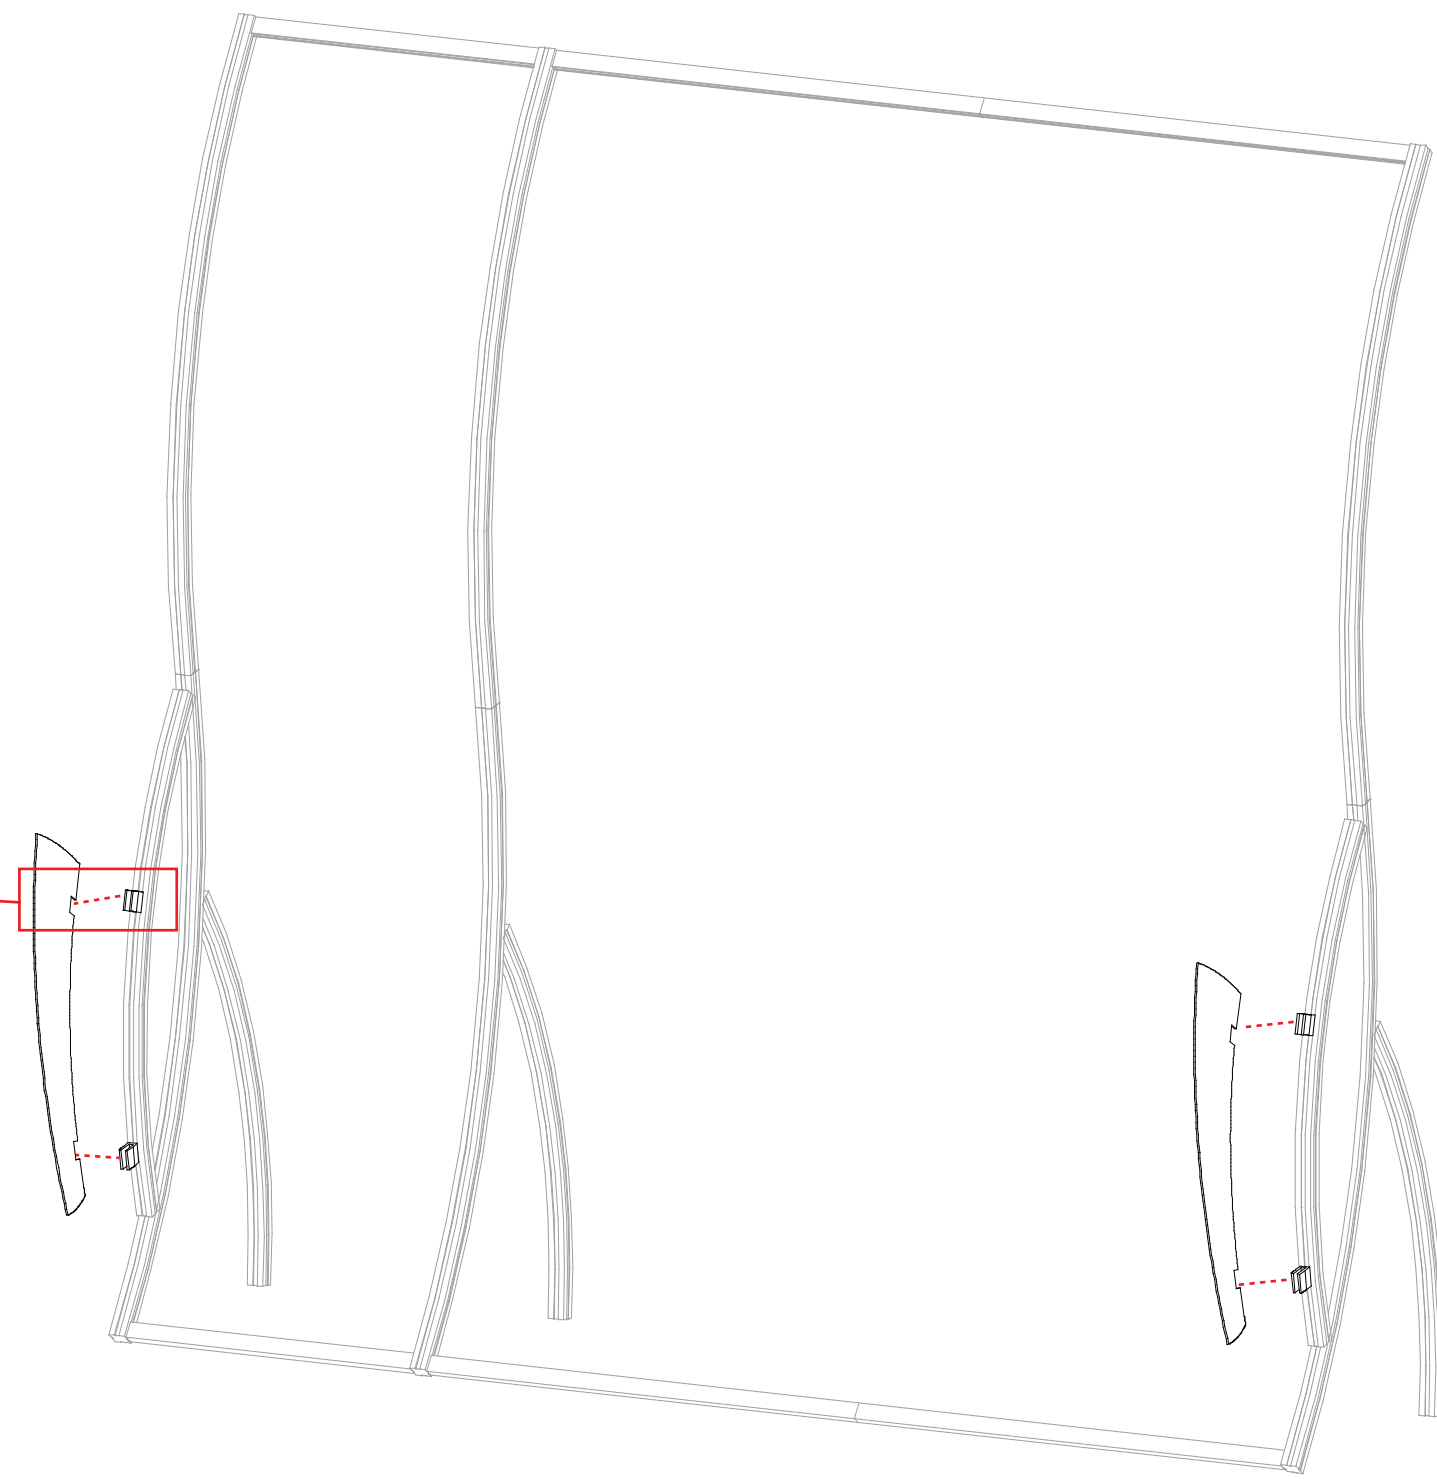Flathead Screwdriver


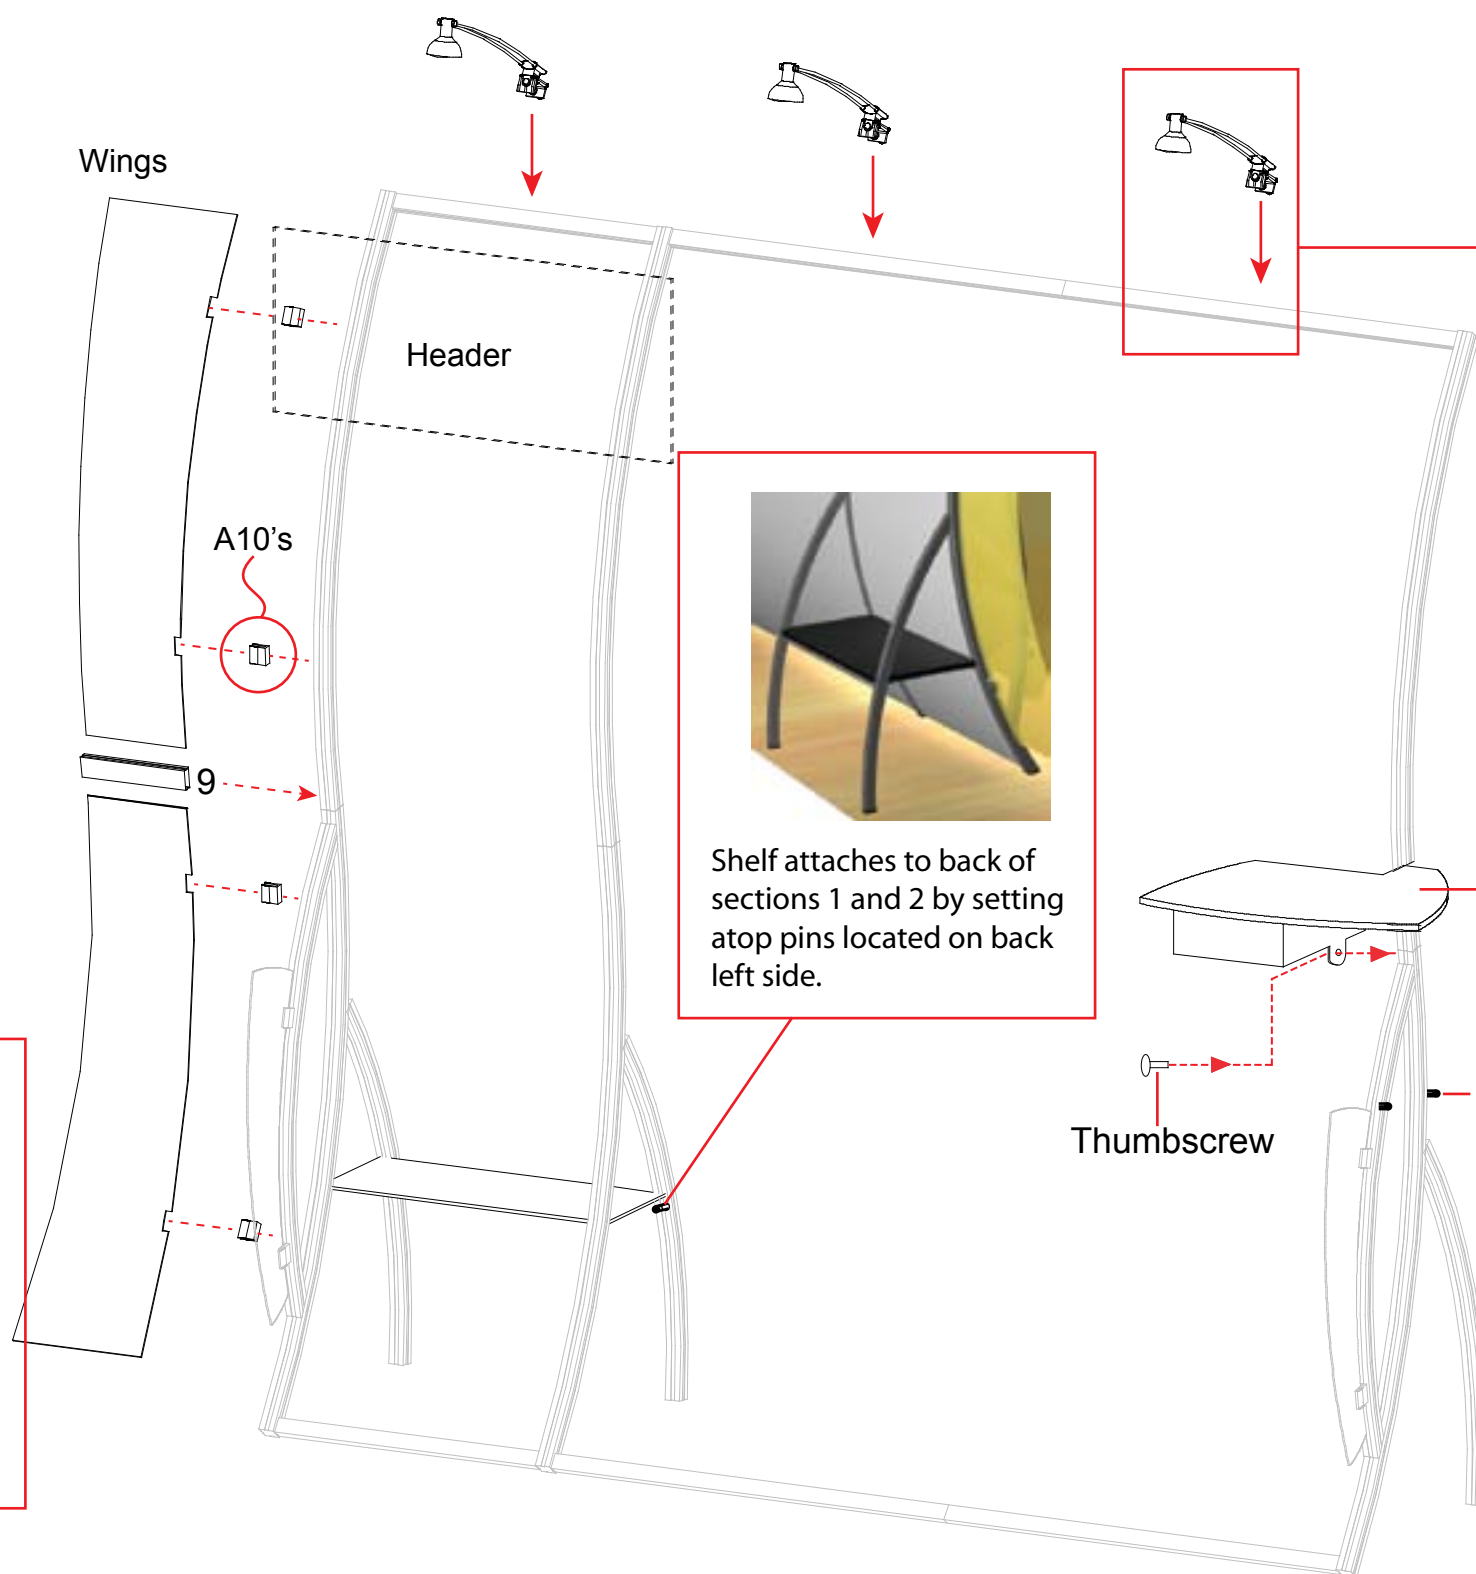


WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Accessory Attachment
Attach header support to backwall and then slide header into groove.

Header



Light Connection
Attach lights to backwall where desired and tighten in place.

Cubby Attachment
Shelf attaches to section 5 by setting atop pins located on right side and securing into place with thumbscrew on left.

Example of A10 Clamp Attachment

Slide connector on back of A10 clamp into groove of extrusion.

When desired location is found, tighten set screw to secure.

Tighten knob to secure shelf/wing in place.

Slide onto back pin first.

When attaching counter you will need to first slide shelf onto back pin then set down on front pin.


WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Description
A	Left Leg Assembly
B	Right Leg Assembly
C	Horizontal Extrusion
D	Horizontal Extrusion w/ Door Stopper
F	Horizontal Extrusion

Steps:

- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- 2) Connect upper horizontal extrusion [F] between top of leg assemblies [A and B] as shown.
- 3) Insert Laminated infill into grooves of leg assemblies [A and B].
- 4) Attach extrusion door between leg assemblies [A and B] and atop laminated infill.
- 5) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

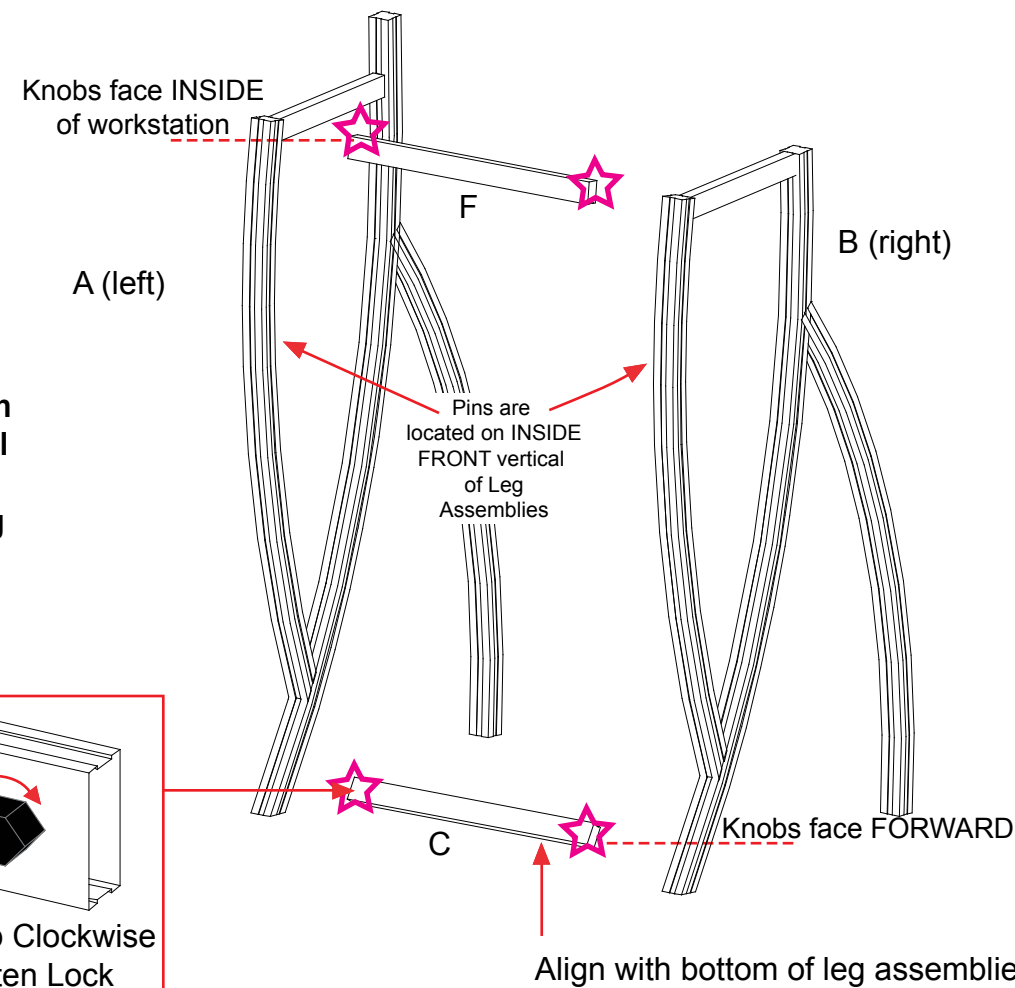

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.


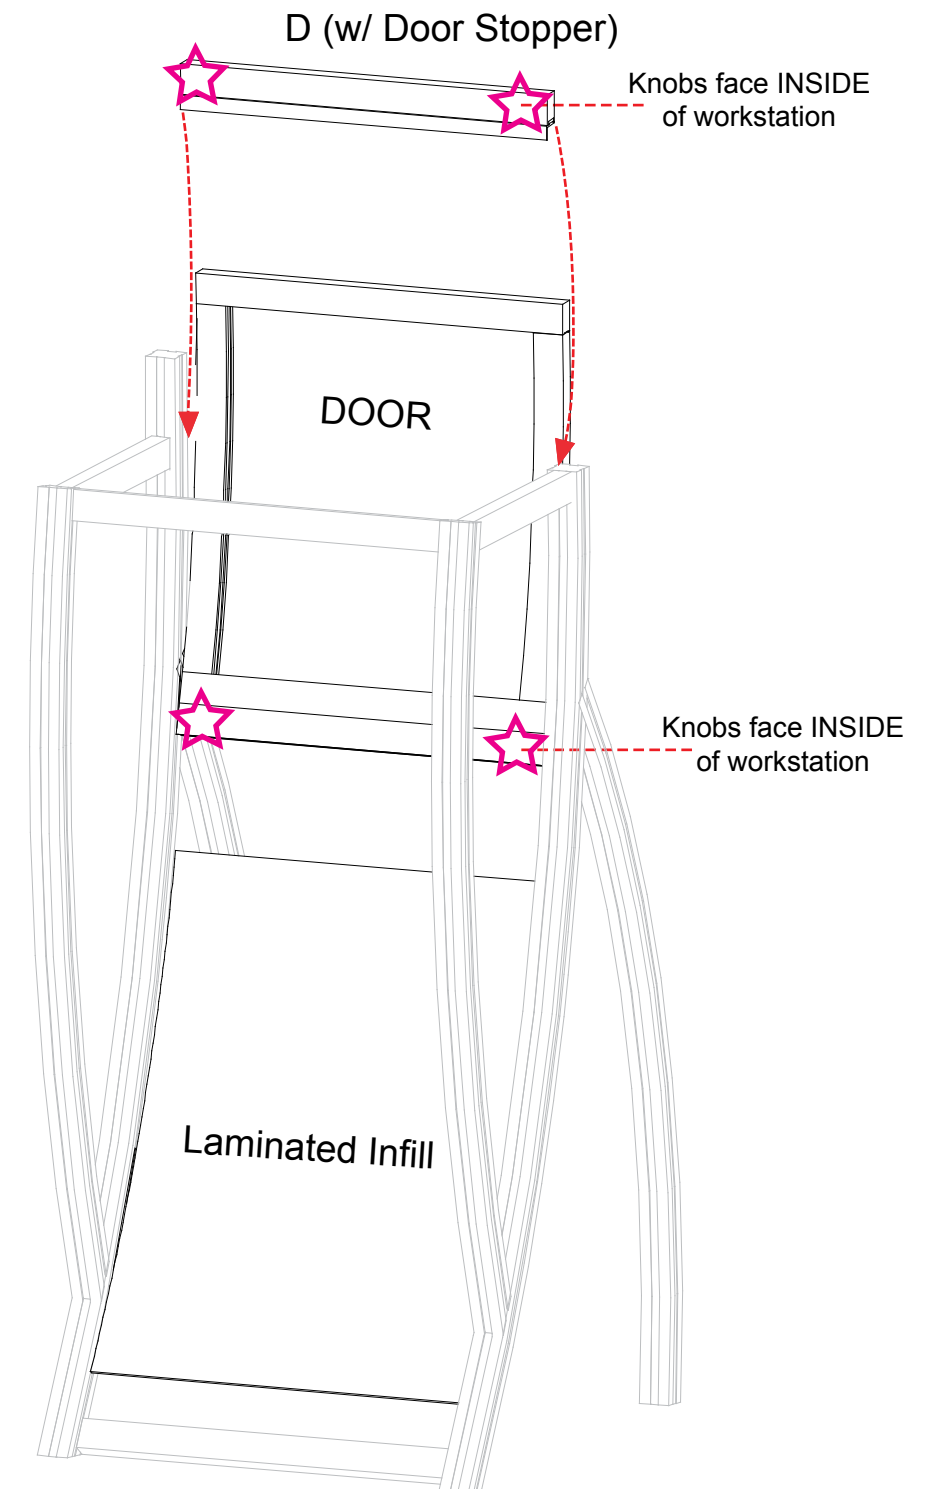


WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Steps:

- 1) Attach laminated front panel to assembled pedestal using standoff caps as shown below.
- 2) Place internal shelf into assembled pedestal atop pins..
- 3) Set counter atop assembled pedestal and secure with velcro straps attached to underside of top.

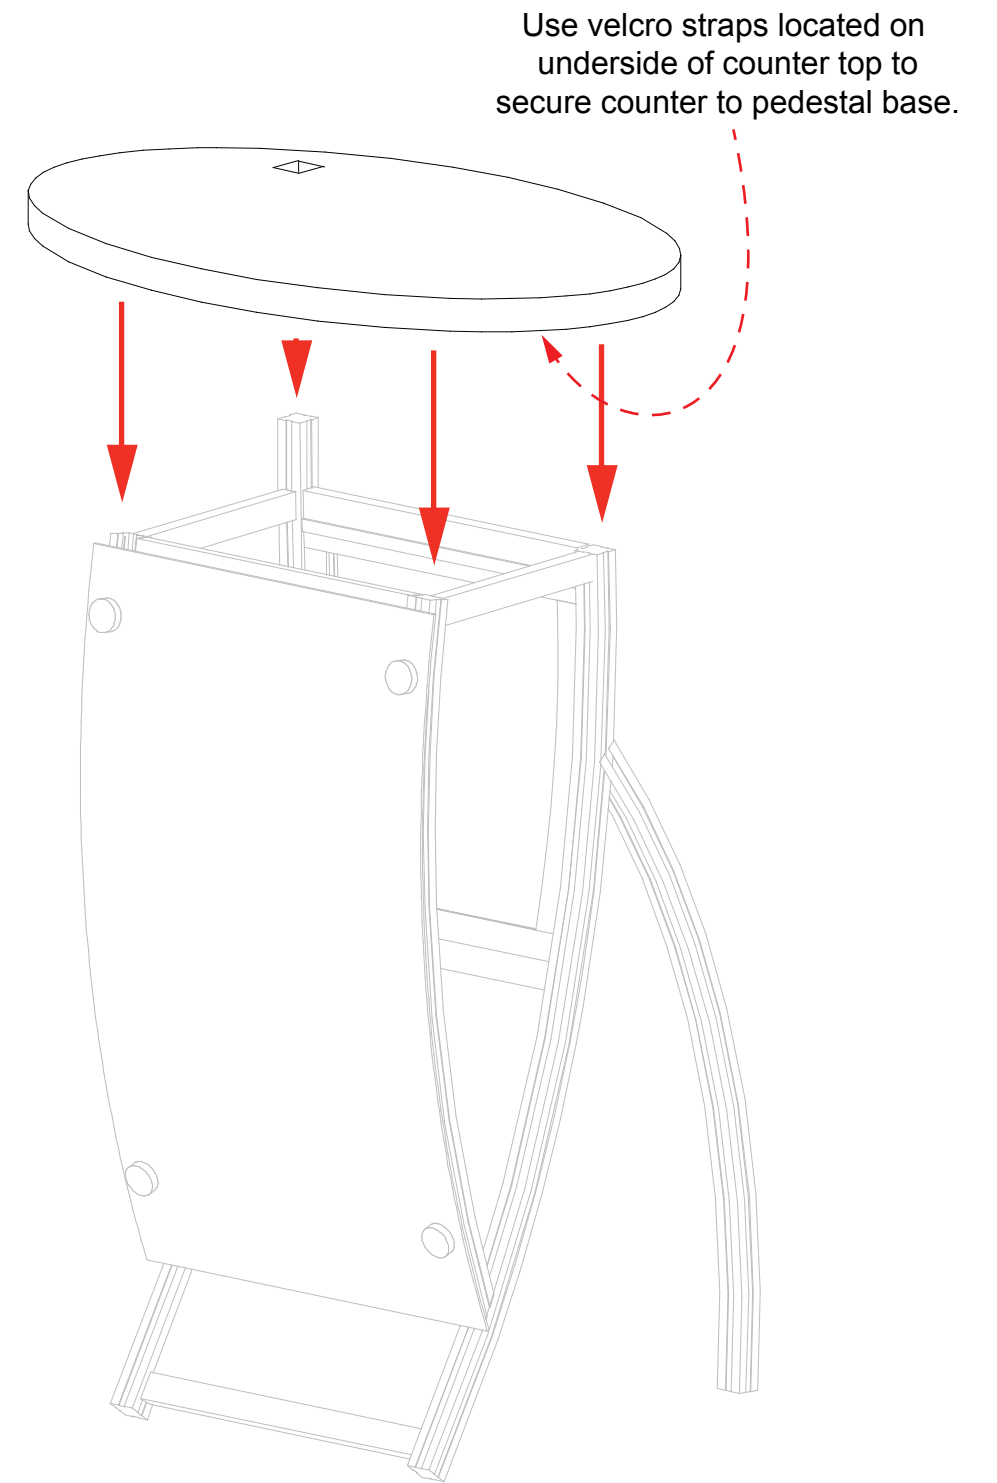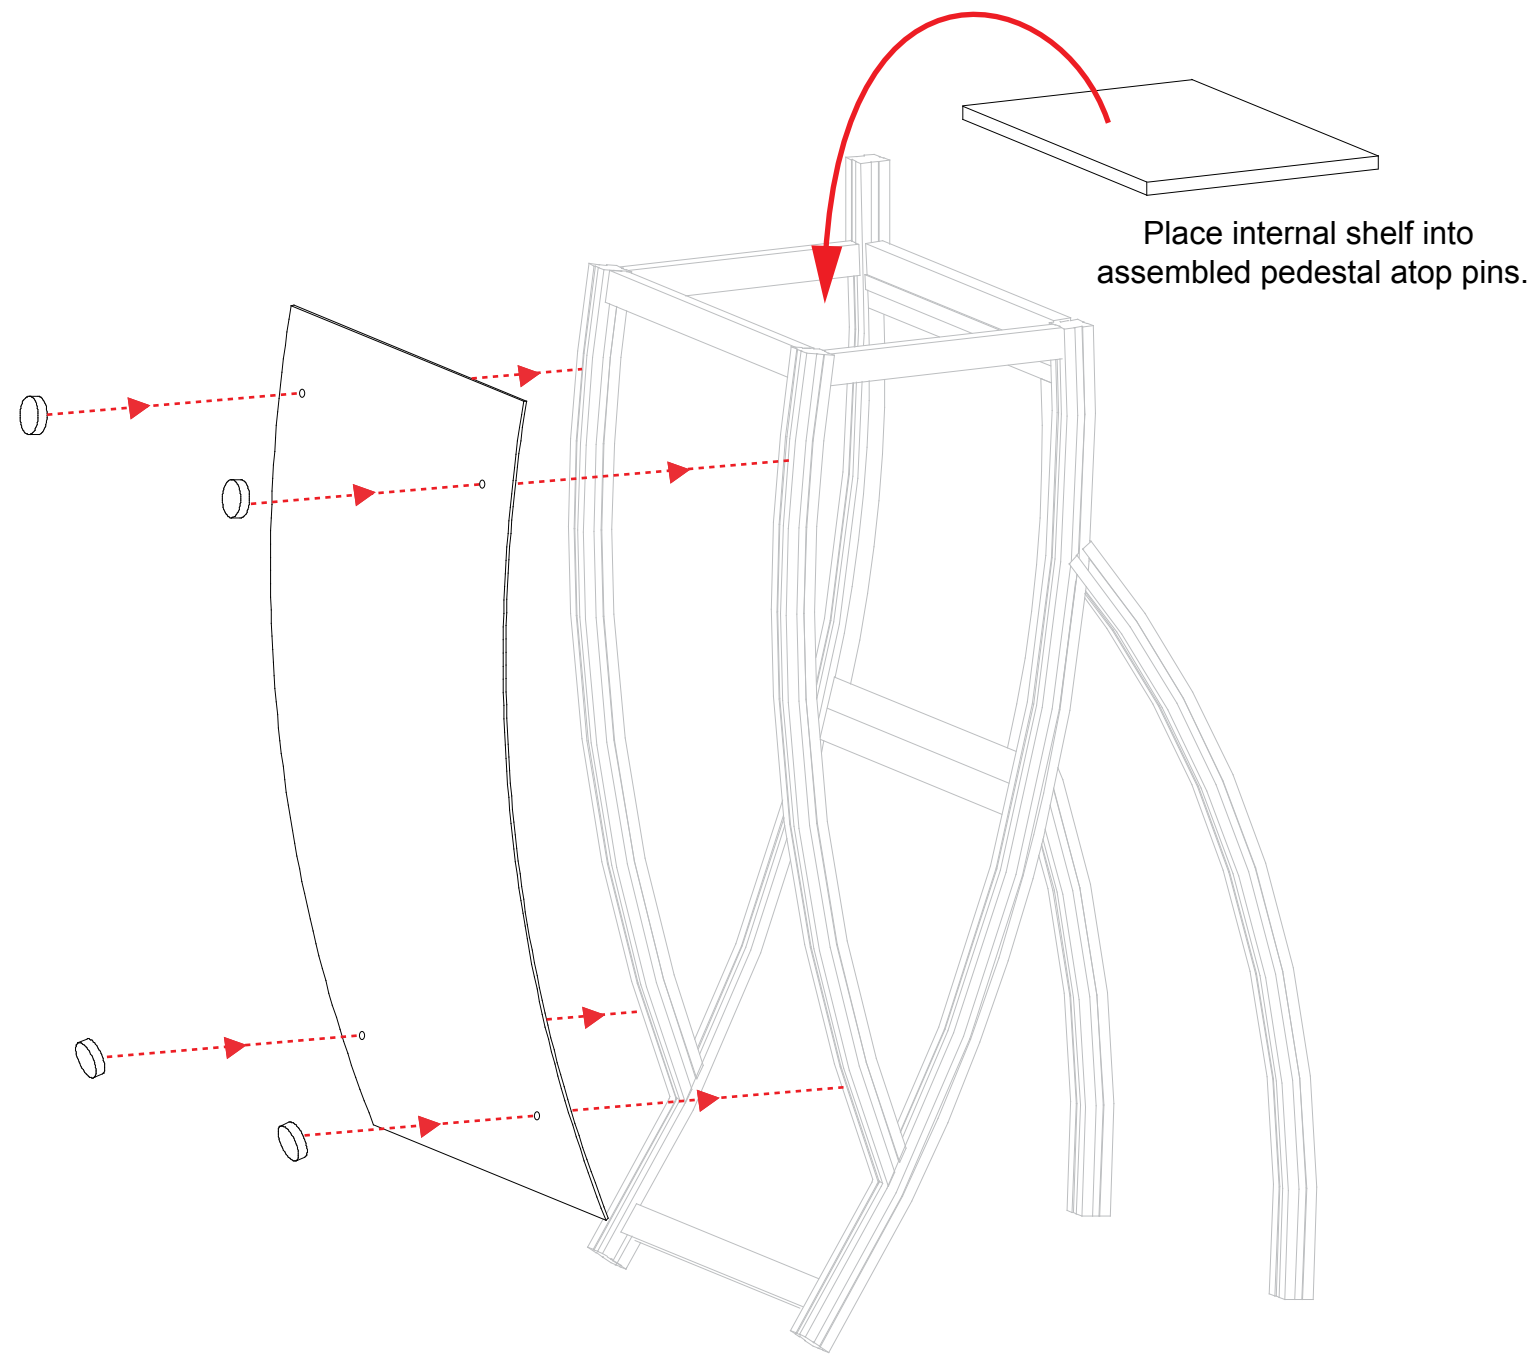

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Description
G	Curved Montior Mount Extrusion

Steps:


- 1) Slide connection bar into lower leg assembly. Slide upper vertical over bar and secure both.
- 2) Attach flag to A10's located on curved vertical extrusion G.
- 3) Attach monitor mount to vertical as shown in detail below.

Decorative Wing Attachment


Slide A10 Clamp into groove of square extrusion.

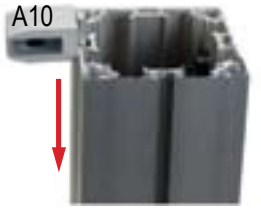

When desired location is found, tighten set screw to secure.




Tighten black plastic set screw to secure Wing in place.



Black Plastic Set-screw


Monitor Mount Attachment

NOTE: Monitor mount should be installed while laying down on floor


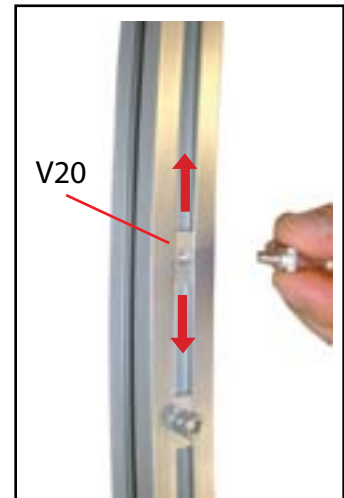


V20

Adjust V20 connector to desired location. Then remove screws.

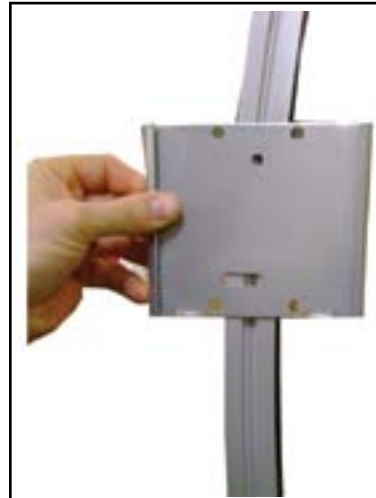

Place mount plate in front of V20 connectors. Then secure with screws.

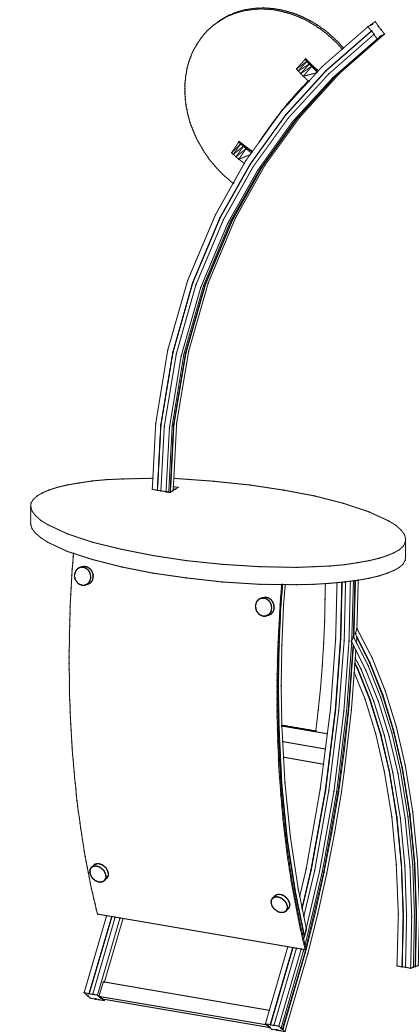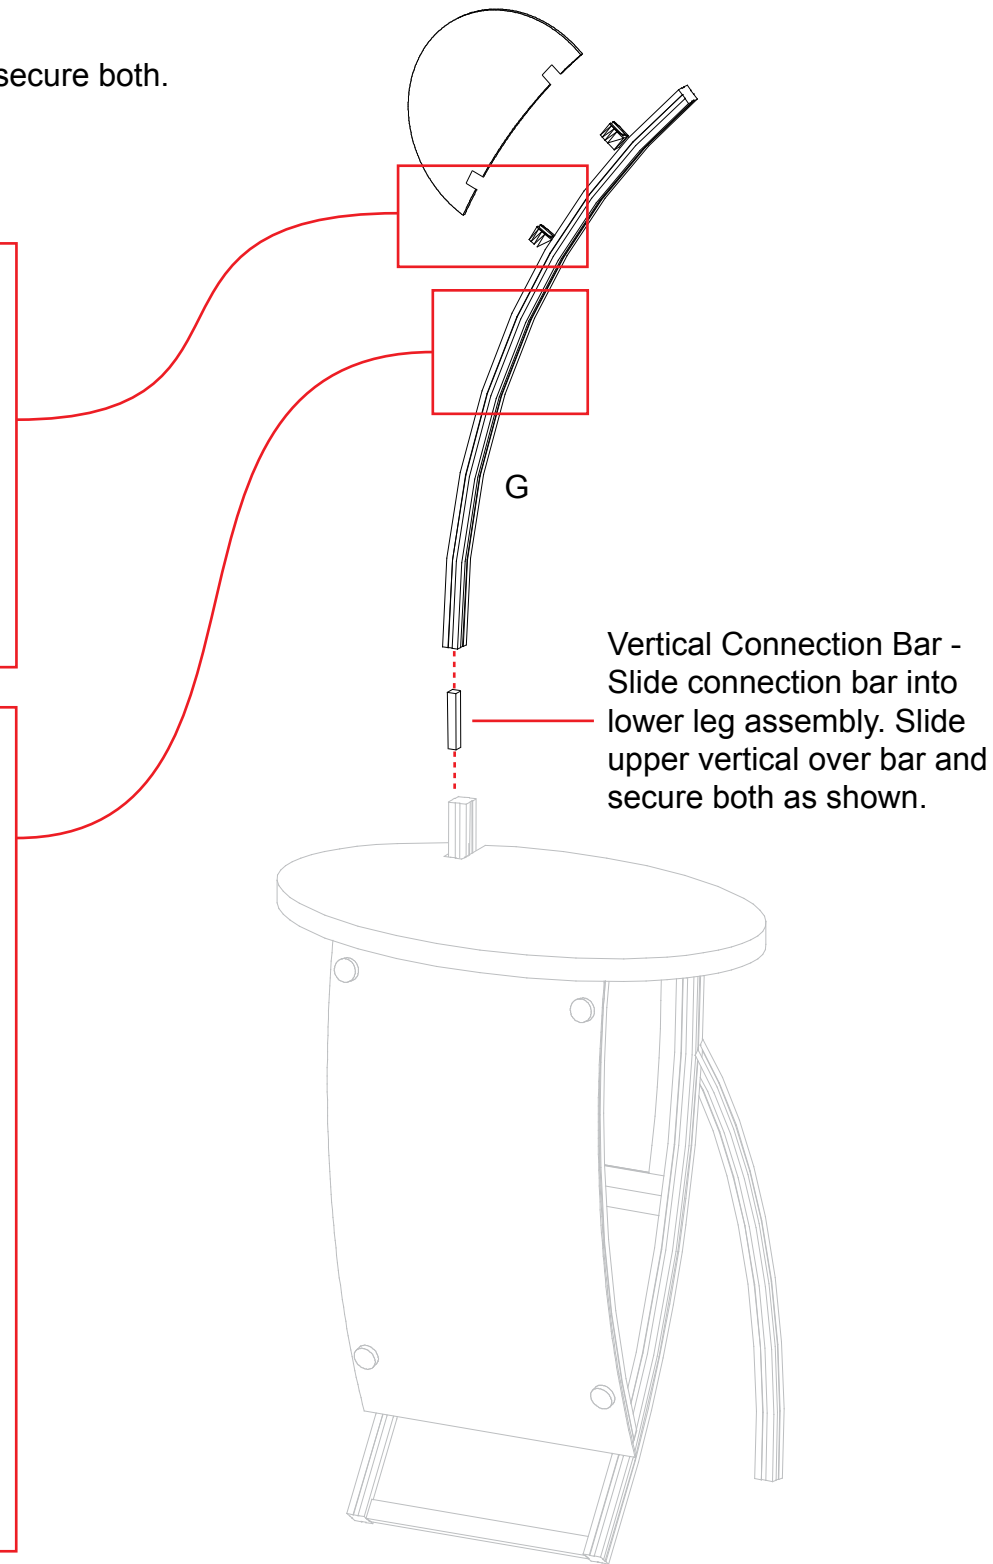


When assembled




WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


Top View of Each Level

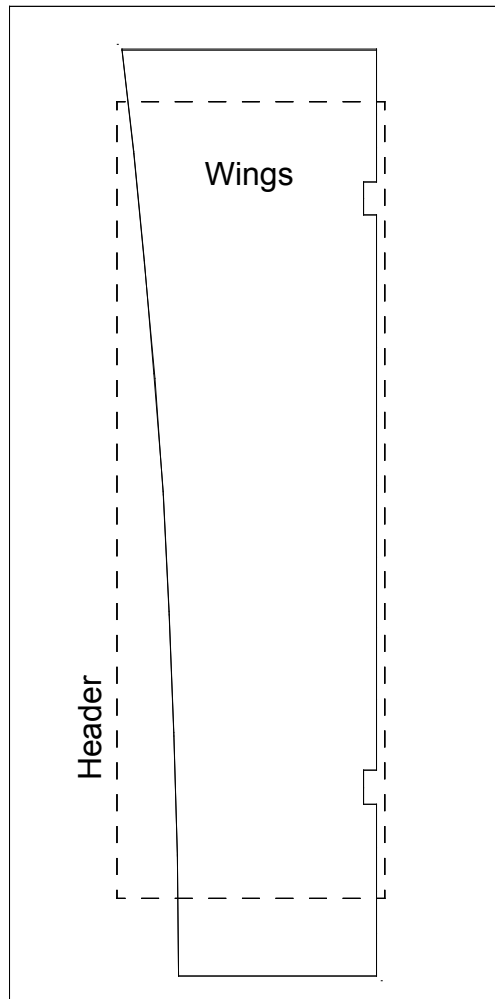


Level 1

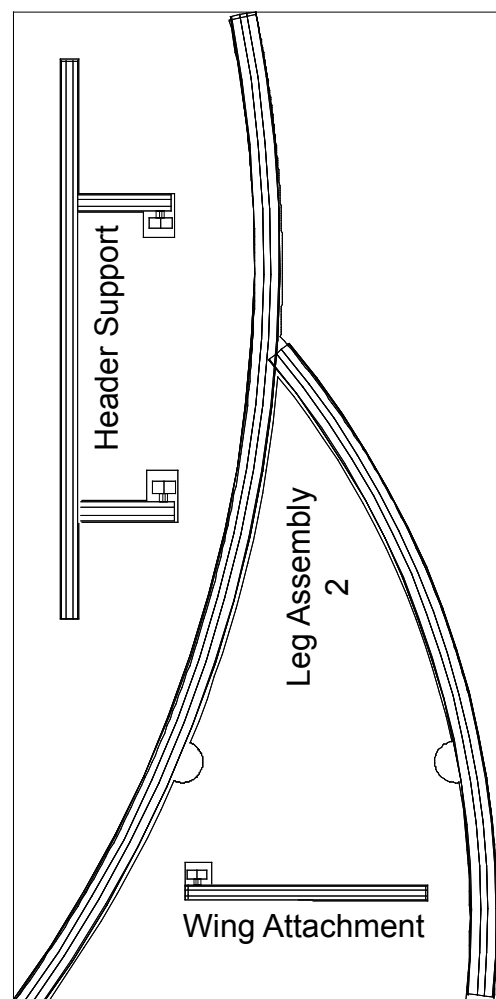


Level 2

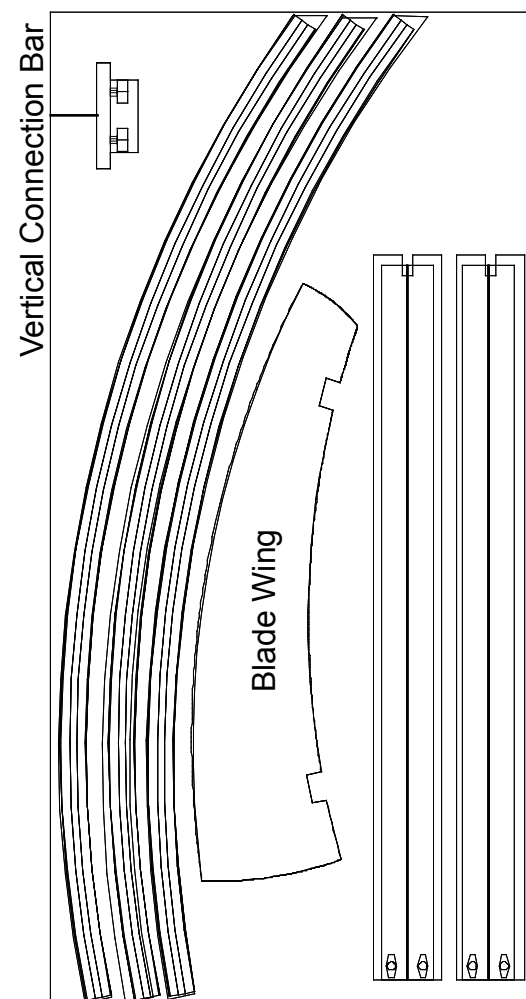

Level 3

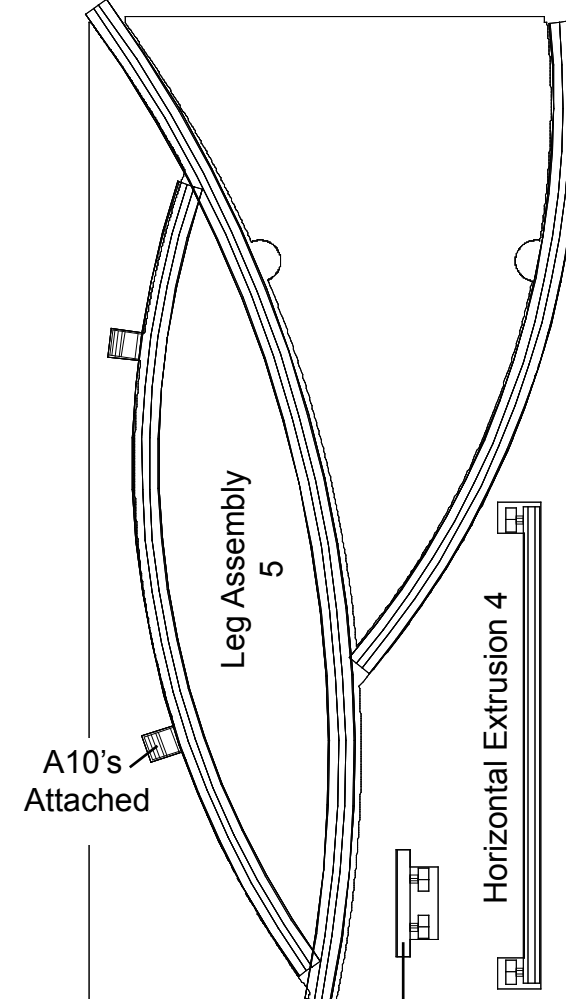

Level 4

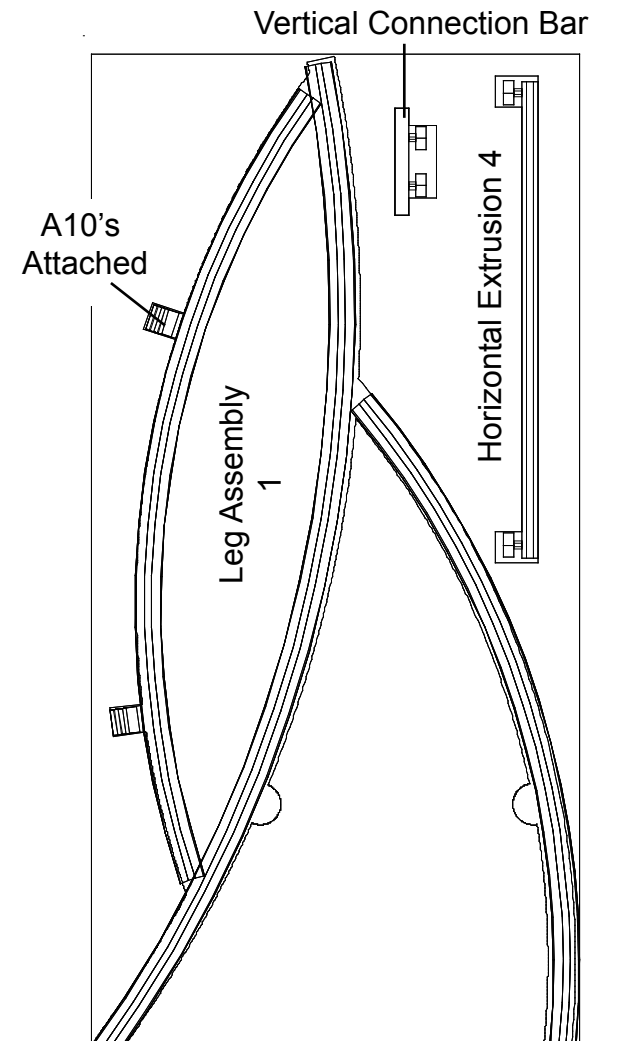


Level 5

Vertical Connection Bar

- Additional Items:**
- Setup Hardware
 - Graphic
 - (3) Lights

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


Top View

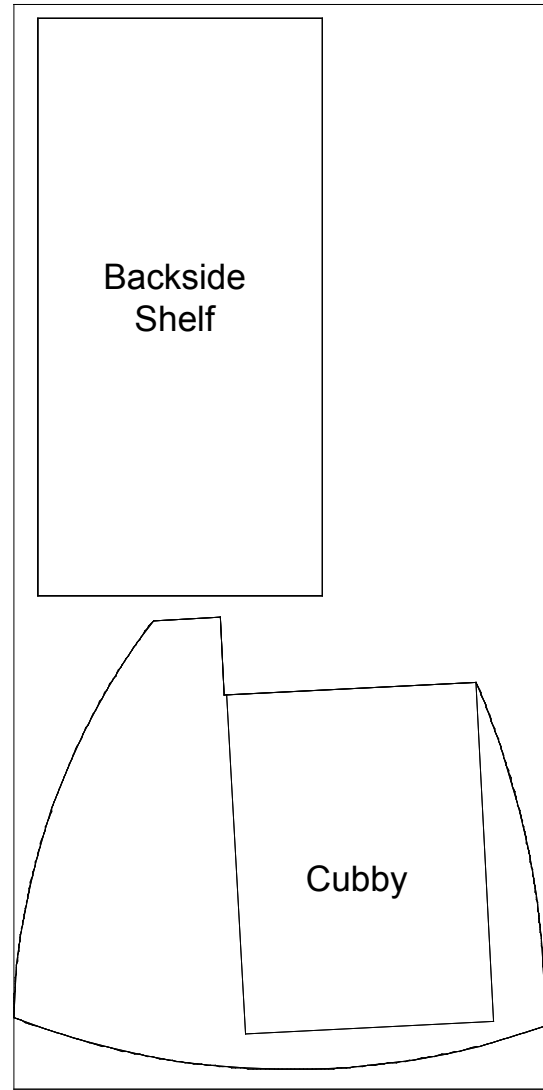


Level 1

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


Top View of Each Level

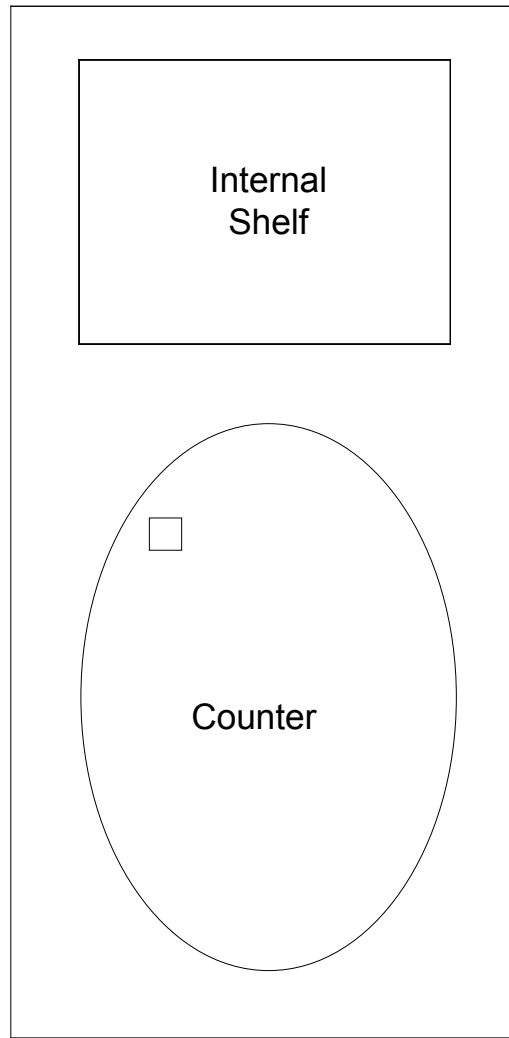


Level 1

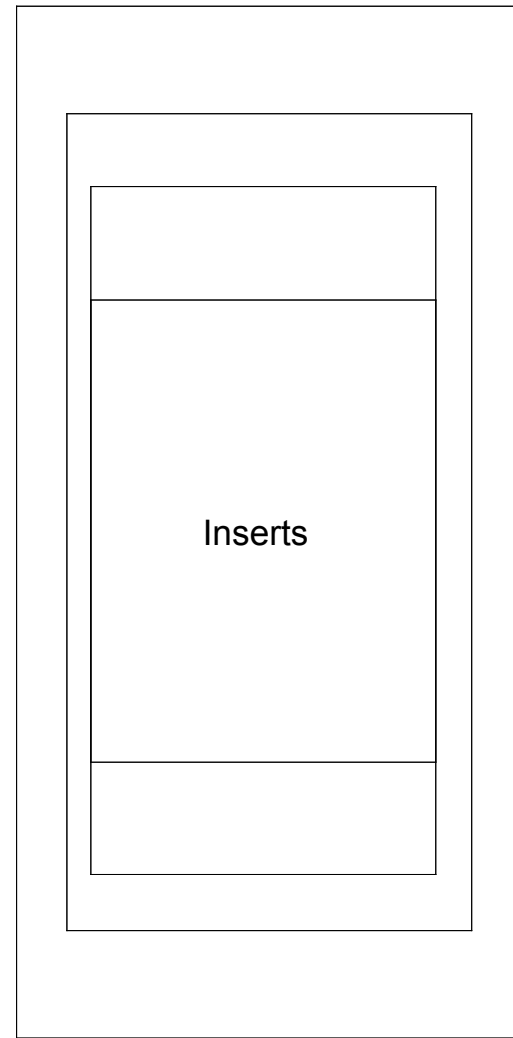


Level 2

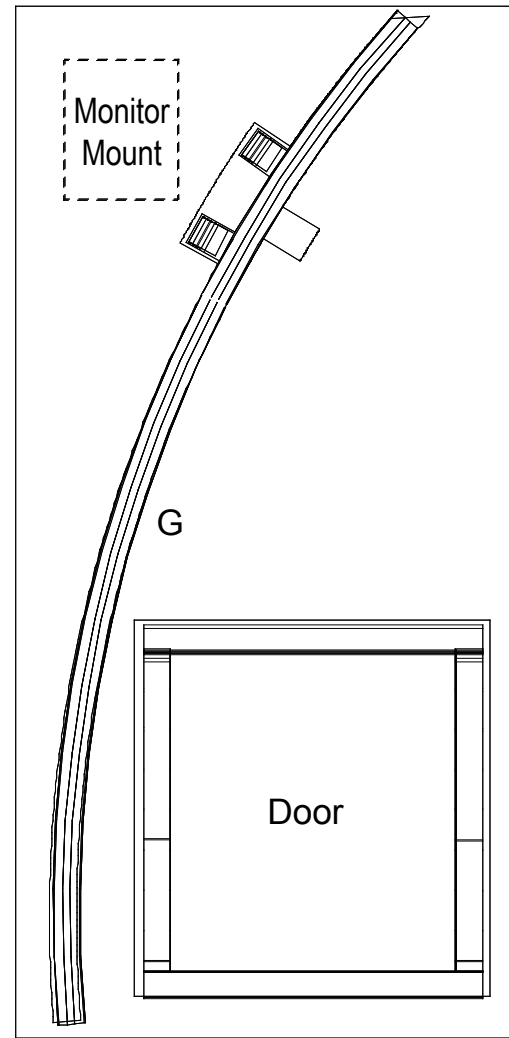

Level 3

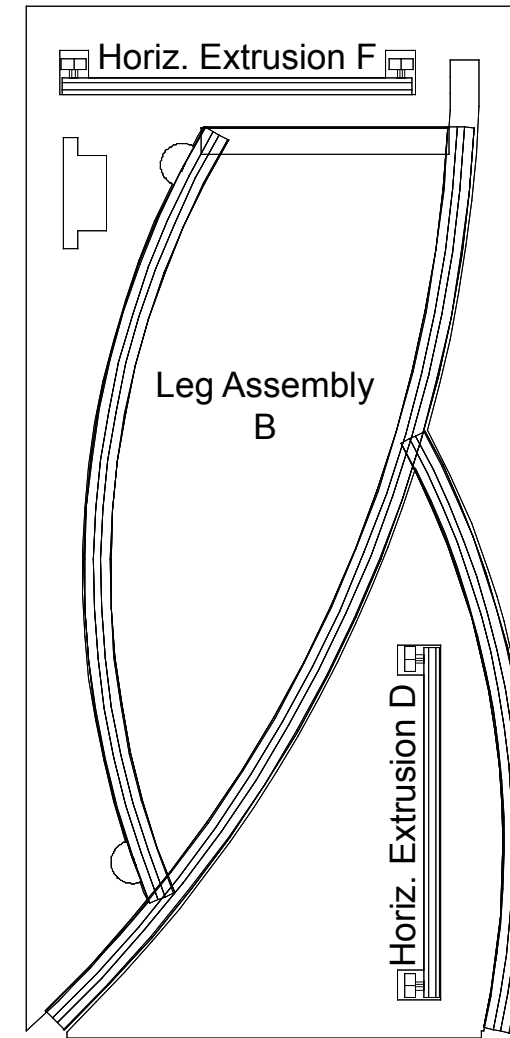

Level 4

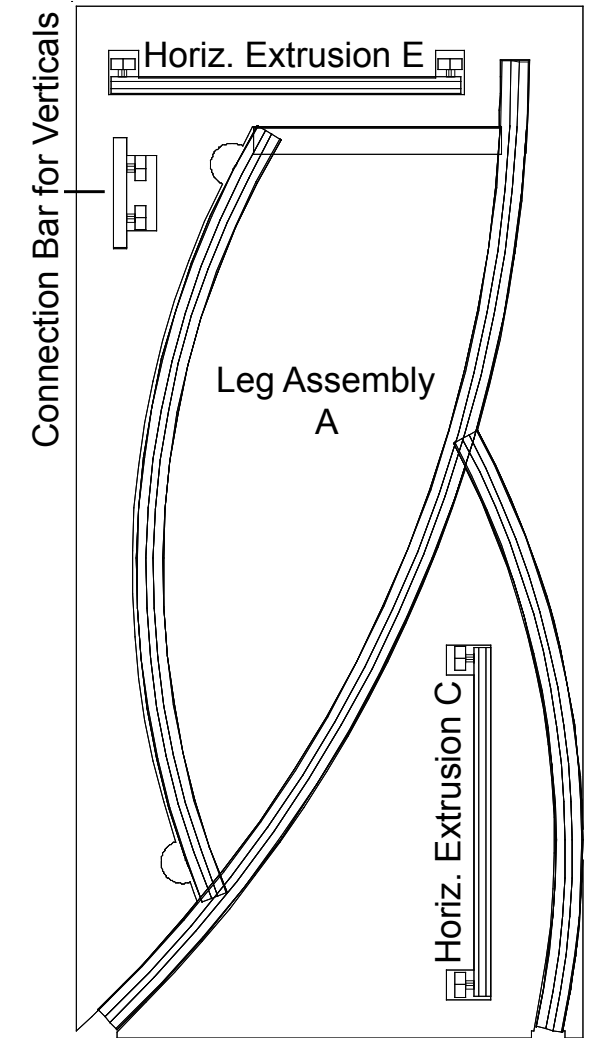

Level 5

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING