



Top View

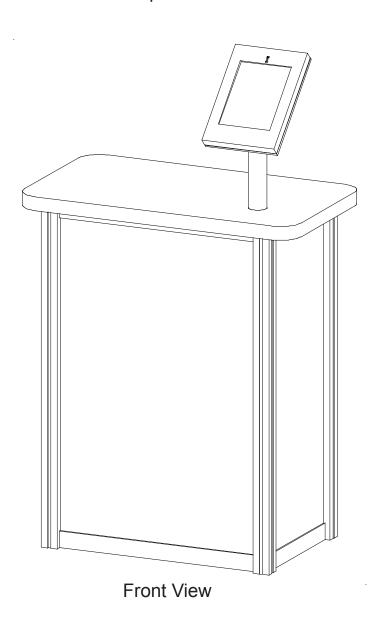

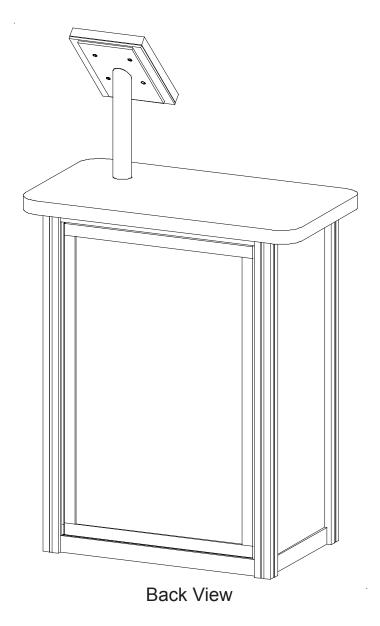

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly

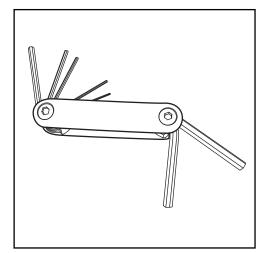


Hex Tool - Essential for Assembly

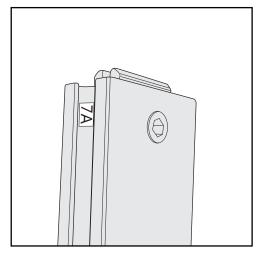


Part Identification - Numbering



MARNING

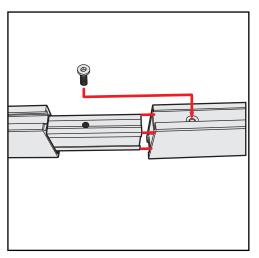

Spline Connection

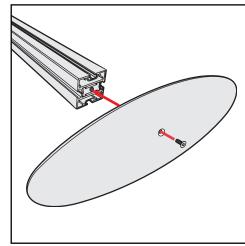


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS MAY BE REQUIRED

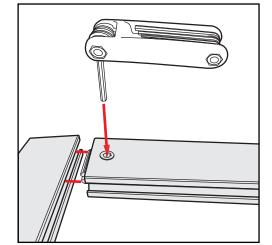

Extrusion & Lock Connection

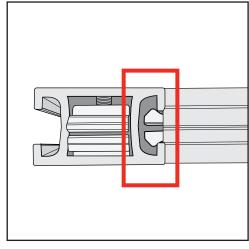

Engaged Lock



ALL CONNECTIONS MUST BE TIGHTLY SECURED




Order #XXXXX MOD-1551 Assembly


Item	Qty.	Description
1	1	37.5" S44 Vertical Extrusion
2	1	37.5" S44 Vertical Extrusion
3	1	37.5" S44 Vertical Extrusion
4	1	37.5" S44 Vertical Extrusion
5,5A	2,2	13.25" Z45 Horizontal Extrusion
6,6A	2,2	22.5" Z45 Horizontal Extrusion


Steps:

- 1) Connect lower horizontals [5] & [6] between verticals [1] [2] [3] & [4].
- 2) Place infills between verticals.
- 3) Connect Shelf Supports to Velcro on verticals, then place shelf on top of Shelf Supports.
- 4) Connect door to vertical [4]. See Door Connection detail.
- 5) Attach upper horizontals [5A] [6A] & [7A] between verticals, to secure Infills.
- 6) Place counter on top of assembly, then lock in place. See Counter Top Attachment detail.
- 7) Attach iPad mount to counter top, using bolt. See MOD-1329 Assembly sheet for details.





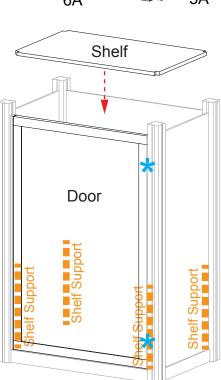

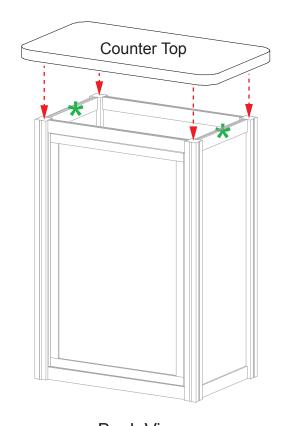



* Counter Top Attachment


Align hole with pin

Rotate pin. Spring

will push pin into hole.

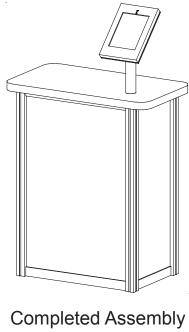




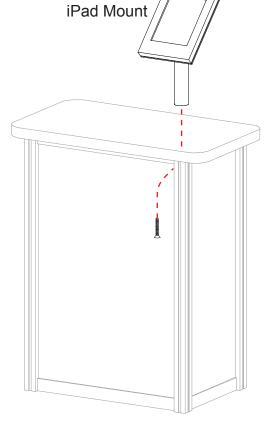

MOD-1329

Front View

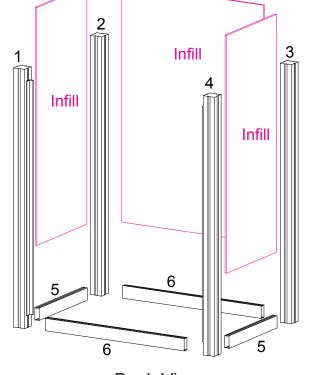


Back View


Back View




Steps:

- 1) Attach mount plate to post, using set screw.
- NOTE: Mount plate must rotate to left and right before installing clamshell.
- 2) Attach post assembly to counter top, using bolt from under counter top.
- 3) Attach clamshell to mount plate, using hex nuts.
- 4) Insert iPad in clamshell, then route cords. See Cord Management for iPad detail.

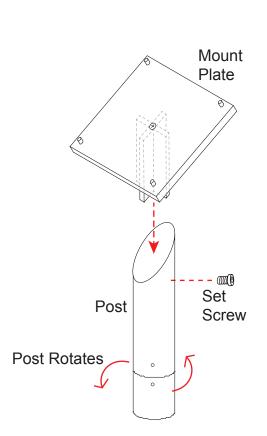

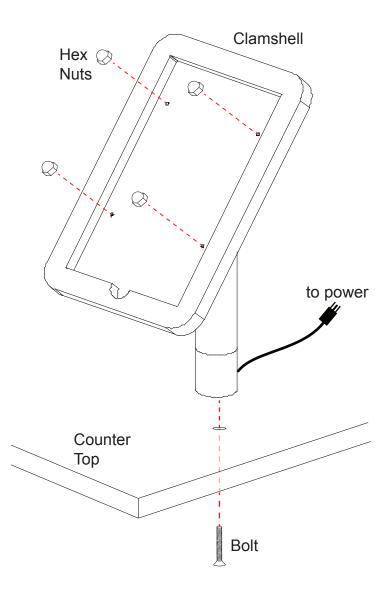

Optional Cover for Home Button

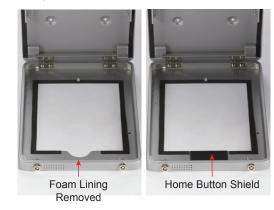


- 1) Remove foam lining from inside bottom of clamshell.
- 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening.

NOTE: This is a permanent fix and can't be easily removed.

Rotate clamshell to turn iPad from portrait to landscape orientation.

Completed Assembly

Cord Management for iPad

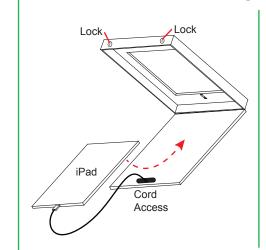



Attach iPad cord to supplied USB extension cord. Feed USB cord through top hole of post, then out bottom hole of post. Connect to power.